

Northeastern Arborist Supply 50 Notch Road Woodland Park, NJ 07424 973-837-1390 ■

Basic Instructions for pre-paired intercoms:

- 1) Connect the communication unit to the chosen headset. The plug has a black and silver side, this needs to be on the same side as the **X** in the center of the control unit.
- 2) With headset connected. Hold power button down until "power on" is heard. Blue light will flash a few times, followed by slow red flashing. Do this with as many sets as you plan on using.
- 3) In series starting with #1. Tap the A button on #1, "intercom connected" is heard. Blue will flash a few times then alternating red/blue. After "intercom connected" is heard, it takes a few seconds for the units to be able to communicate.



If 3 units are to be used, make sure the #3 unit is on (flashing red slow) tap the **A** button on #2. "intercom connected" is heard. Blue will flash a few times then alternating red/blue. A few seconds later communication will start. Repeat if 4 units are to be used.

Using two pair of intercoms independently:

Starting with 4 pre-paired intercoms, connected in series:

- 1. At start up Pair #1 with #2, by tapping **A** on #1. #1 and #2 are paired. Skip to #3 and tap **A** once, #3 will now be paired with #4. By not tapping **A** on #2 the connection between #2 and #3 was not made, thus two separate pairs (#1-#2) and (#3-#4).
- 2. If an Instructor or foreman wants to leave the group to make a call or check on another area. They must be last or highest number unit. Example: #4 of a four-person team is leaving. The **B** button on #4 is tapped twice. A beep will be heard and the connection between #3 and #4 will be disconnected. If they want to rejoin the group a single tap on the #4 **B** button will reconnect. Also #3 can tap the **A** button once to reconnect #4. (Units are paired **A** to **B** on the way up the chain. Connection between #1 and #2, is A on #1 to B on #2 etc.)
- 3. Power off by pressing Power and volume + at the same time. "power off" is heard.
- 4. If they will not connect or sound quality is poor. Turn off and restart.

