

Getaway Instructions Addendum

1. Forestay/Shroud Assembly

The attachment of the shrouds and forestay to the mast tang has changed since the printing of the manual. Follow the next two steps for clear instructions on how to attach the wires.

- 1. The shrouds in the rig kit box are attached together by a shackle. Attach the shackle to the mast tang on the comptip. Be sure to wrap the small keeper wire through the small hole and around the shackle to prevent the pin from unthreading.
- 2. With the shrouds attached, located the shackle on the jib forestay wire and attach it to the shackle that is attaching the shrouds to the mast tang.

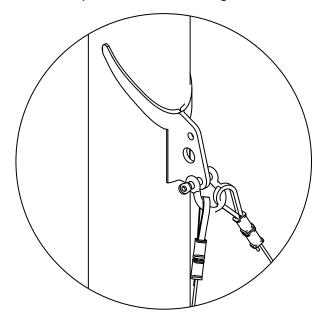

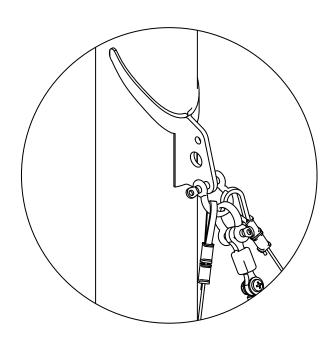

2. Cleat Angle Adjustment Instructions

The mainsheet cleat angles are pre-adjusted from the factory at an angle that is best for using the wings on the Getaway. If you are not using the wings, you may want to adjust the cleat angle for more ease of use because you are seated at a lower position. To adjust:

- 1. Use the small Allen wrench provide in your rig kit and loosen the small hex head screws on each side of the block. You will only need to loosed each bolt 1-1/2 turns.

2. With the screws loosened, the cleat arm should be free to move. Adjust the cleat to the best angle and tighten the screws back up on each side

